


OILED FLOW FRAME CARE INSTRUCTIONS

RESIDUE

- The black oiled finish is protected with a wax layer.
- Please note that the wax protective layer can blister during air freight leaving a white residue on the surface. To remove simply buff any affected areas with a dry cloth.

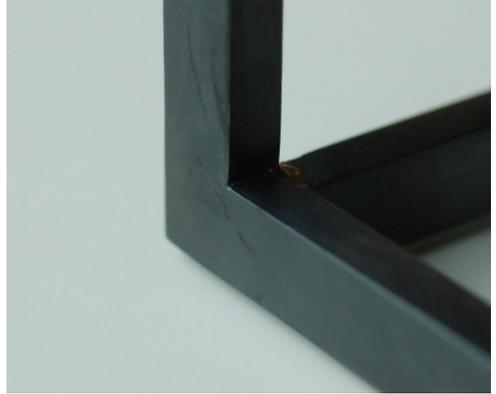

BEFORE

AFTER

CLEANING

- To clean use a surface cleaner and cloth.
- Do not place in a dishwasher.

TO RE-APPLY EXTERNAL WAX

- Every 6 months clean as above and apply a liquid wax finish.
- Apply liberally and polish with a lint free cloth.

RECOMMENDED WAX

- Best Car Polish - X1 Shine and Seal Premium Car Polish and 12 Month Paint Protection Sealant